


RDTM INSTALLATION INSTRUCTIONS



Tools

Required:


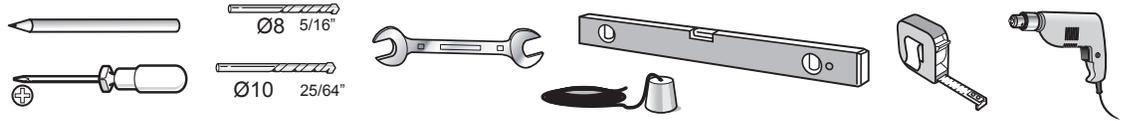


Parts:


RDTM-6

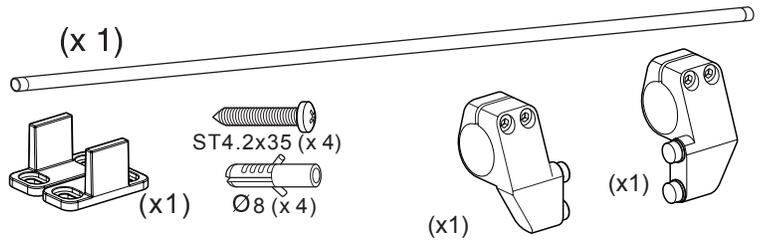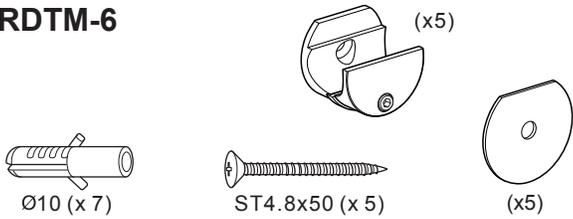

RDTM-8

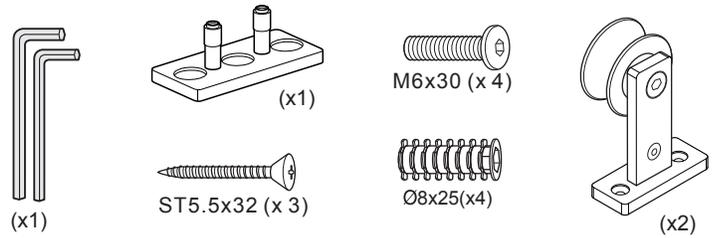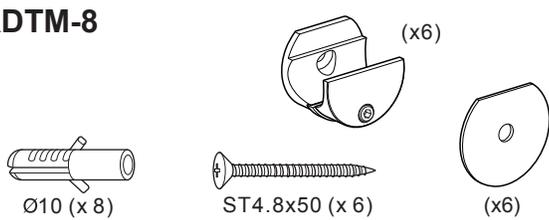

RDTM-6

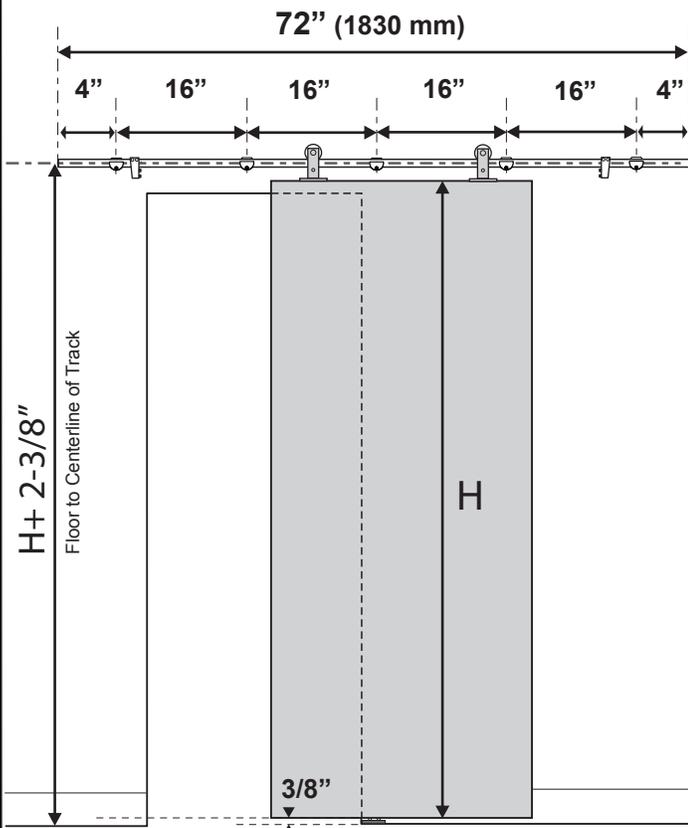

RDTM-8

