


AH-PRIVLATCH INSTALLATION INSTRUCTIONS

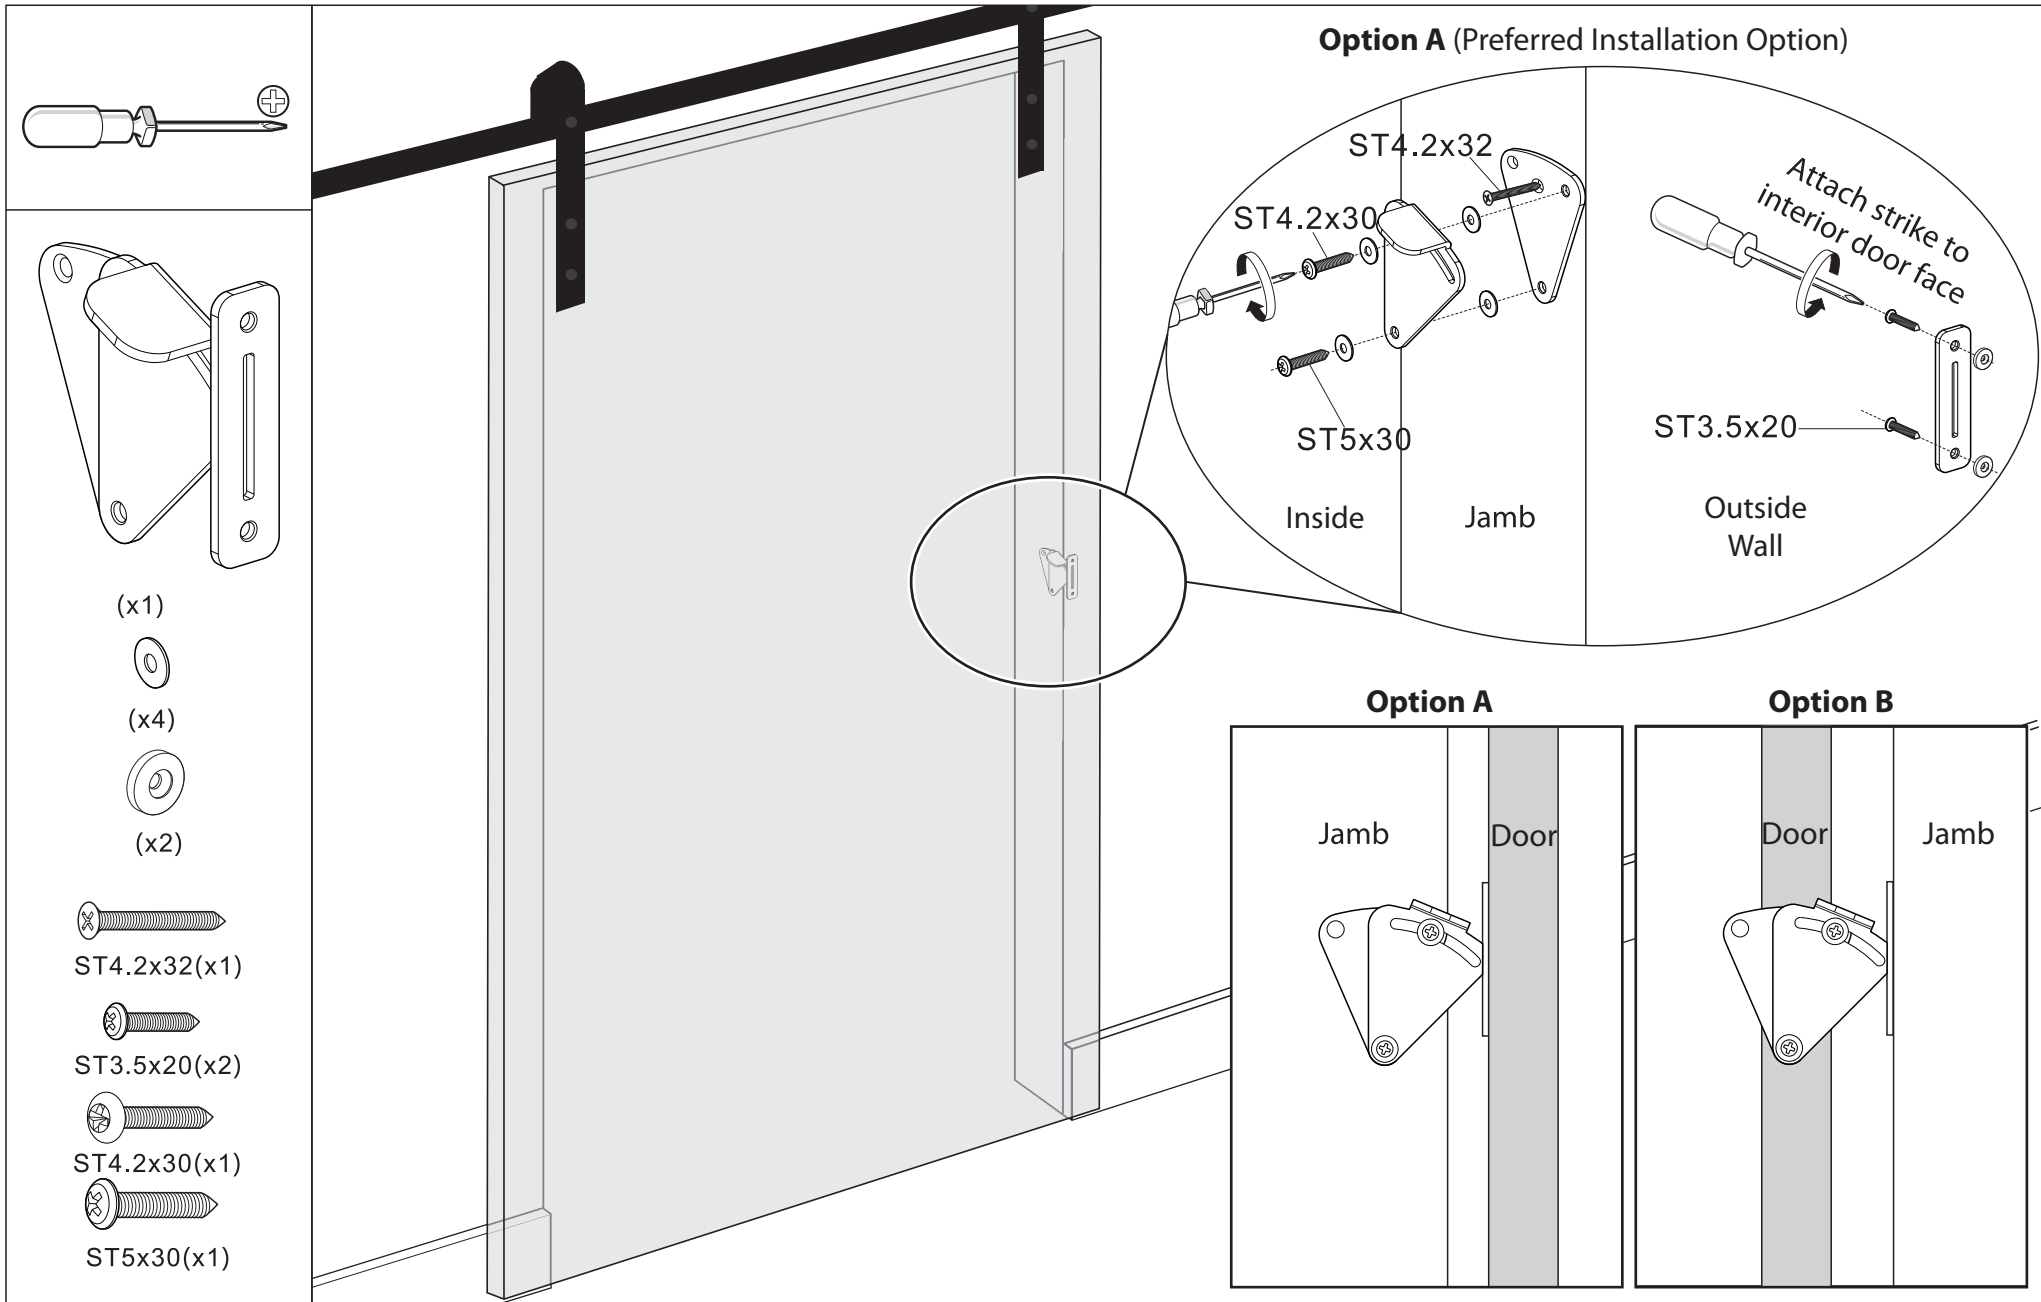

For emergency egress, slide a thin card such as a credit card upward to release the lock.

Warning: if used on a pocket door, a 1/8" diameter through-hole must be drilled behind the strike plate so that an object such as a paper clip can release the lock.